



Wash programme	Eco The door will auto open during drying phase
Powder detergent quantities	5g pre-wash+8 g main wash
Rinse aid dosage level	d5
Maximum number of place settings	15
Height adjustment of upper basket	Ensure the upper basket is in its lower most position

Recommended loading patterns

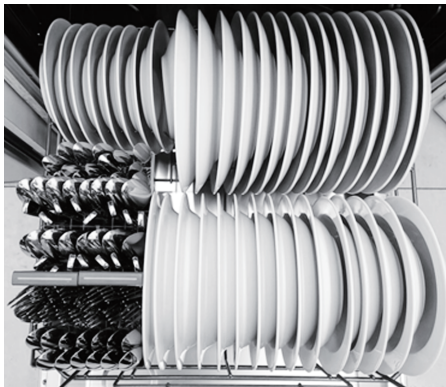

Upper basket

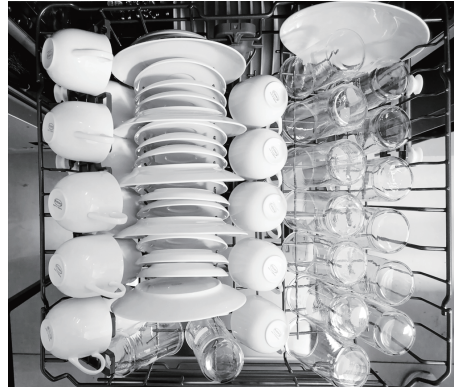

Lower basket

	3		3		3		3		3
3		3		3		3		3	
	3		3		3		3		3
	1	1	1	1	1	1	1	1	1
	4	4	4	4	4	4	4	4	4
	2	1	1	1	1	1	1	1	1
		4	4	4	4	4	4	4	4
	5	5	5	5	5	5	5	5	5
	2	5	5	5	5	5	5	5	5
		2	2	2	2	2	2	2	2
			2	2	2	2	2	2	2

Cutlery basket layout

- 1-Soup Spoons 2-Dessert Spoons
- 3-Teaspoons 4-Knives 5-Forks